

 
 
CONCORD QUIX



DEUTSCH	01
ENGLISH	15
FRANÇAIS	29
ESPAÑOL	43
ITALIANO	57
PORTUGUÊS	71
NEDERLANDS	85
NORSK	99
DANSK	113
SUOMI	127



Norm DIN EN 1888:2012
standard DIN EN 1888:2012
norme DIN EN 1888:2012
norma DIN EN 1888:2012
szabvány DIN EN 1888:2012

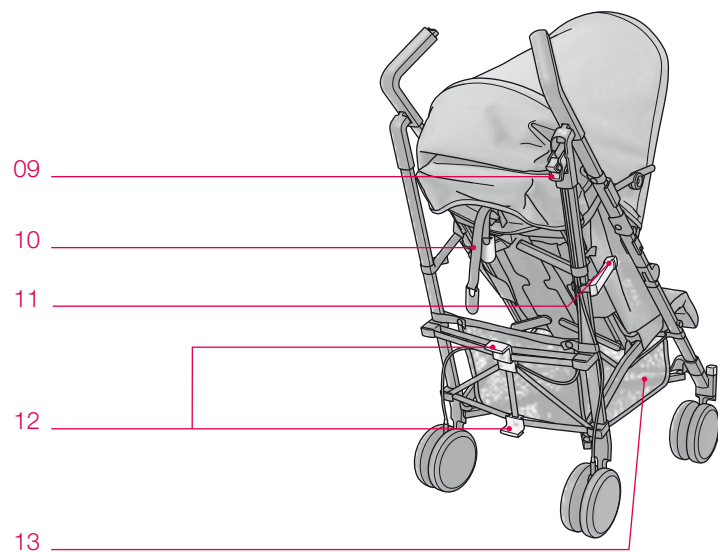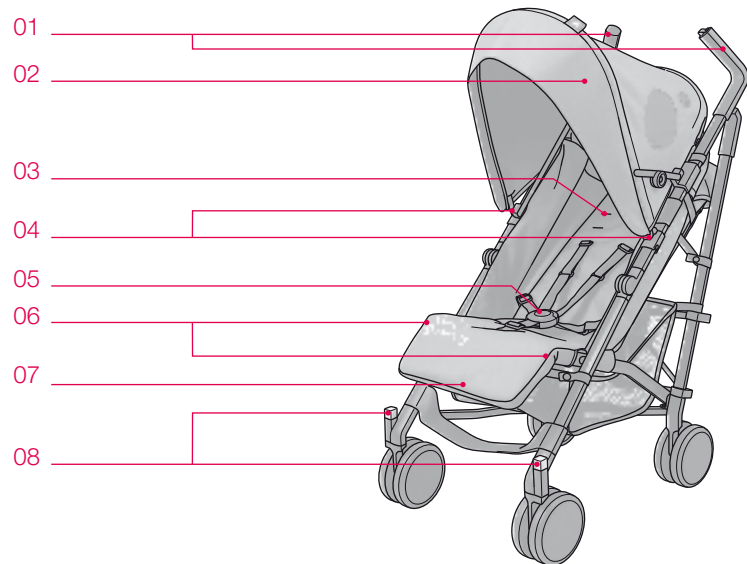

_ ENGLISH



THANK YOU	15
OVERVIEW	16
INSTRUCTIONS	18
CONCORD ORIGINAL ACCESSORY PARTS	19
UNFOLDING THE CONCORD QUIX	20
COLLAPSING THE CONCORD QUIX	21
USING THE HARNESS SYSTEM	22
USING THE PARKING BRAKE	24
LOCKING THE FRONT WHEELS	24
SETTING THE SEAT TILT ANGLE	25
SETTING THE FOOTREST	25
USING THE SUN VISOR	26
USING THE RAIN COVER	27
MAINTENANCE	27
WARRANTY	28

_ THANK YOU

Thank you for purchasing a Concord quality product.
You will be amazed with the versatility and safety of this product.

We hope that you will enjoy using your new CONCORD QUIX.

  _ OVERVIEW

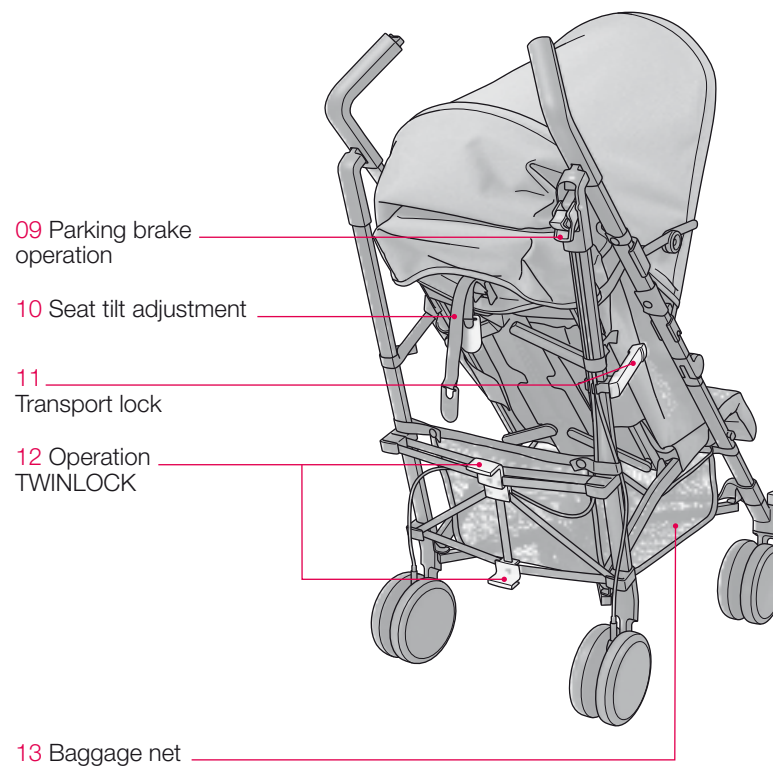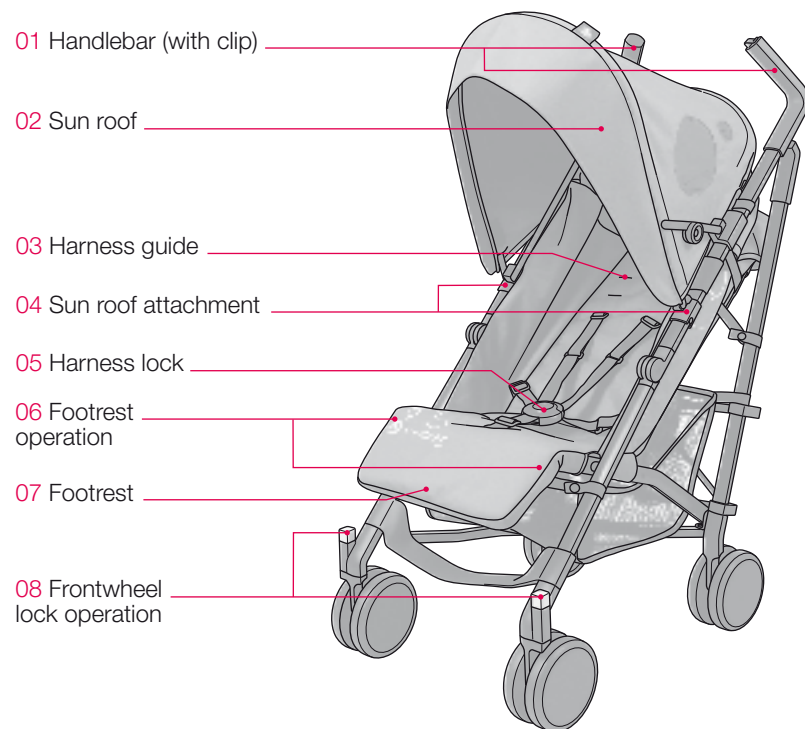

_ INSTRUCTIONS

CAUTION!

- Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.
- Keep these instructions for future reference.

WARNING!

- This vehicle is intended for children from 6 months and up to 15 kg.
- This seat unit is not suitable for children under 6 months.
- The CONCORD QUIX must only ever be used for transporting ONE child.
- The CONCORD QUIX is not a car seat! Make sure to use only certified and approved car seats for transporting your child in a vehicle.
- Never leave your child unattended.
- Do not let your child play with this product
- Always use the restraint system.
- Always use the crotch strap in combination with the waist belt.
- The parking device shall be engaged when placing and removing the children.
- Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect the stability of the vehicle.
- The clip on the handlebar (01) is designed to support max. 1 kg of weight.
- The maximum amount carried in the basket must never exceed the weight indicated on the basket (2 kg).
- Remove the child from the CONCORD QUIX when negotiating stairs or steep inclines.
- This product is not suitable for running or skating.
- Never let a child stand on the frame of the CONCORD QUIX. To do so could cause damage to the CONCORD QUIX and impair its safety.
- Ensure that all the locking devices are engaged before use.
- Periodically check all components of the CONCORD QUIX and any accessories used.
- To avoid injury ensure that your child is kept away when unfolding and folding this product.
- Never use accessories that have not been approved by CONCORD.

- Only replacement parts supplied or recommended by CONCORD shall be used.
- Any damage to the CONCORD QUIX due to overloading, incorrect use, or the use of non-OEM accessory parts will lead to a lapse of the product warranty.
- Extended exposure to direct sunlight may lead to a slight discolouration of parts of the CONCORD QUIX.
- Try to avoid exposing the CONCORD QUIX to extreme temperatures.
- Immediately dispose of any plastic packaging. These could pose a fatal hazard to children.

_ CONCORD ORIGINAL ACCESSORY PARTS

For more information about Concord original accessory parts, contact your specialist retailer or Concord directly.

 
Concord GmbH
Industriestrasse 25
95346 Stadtsteinach
Germany

Phone +49 (0)9225.9550-0
Fax +49 (0)9225.9550-55
info@concord.de


www.concord.de

_ UNFOLDING THE CONCORD QUIX


Lay the CONCORD QUIX onto a flat surface for unfolding.

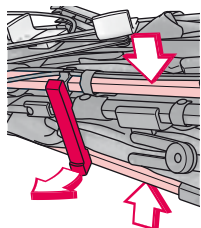

 
Unlock the transport lock by pressing the tubes together and moving the locking lever of the transport lock (11) outward.

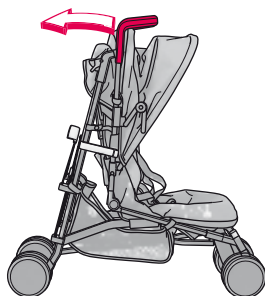

Pull the two handlebars (01) backwards and up to unfold the CONCORD QUIX completely.

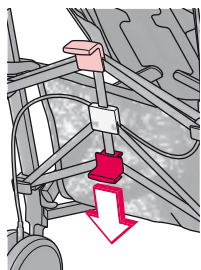

Press the lower TWINLOCK control button (12) down completely until you hear an audible click.

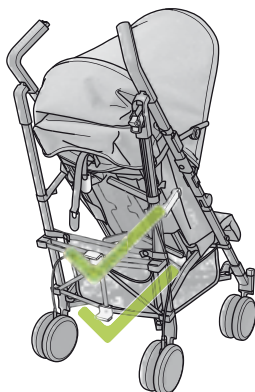

CAUTION!

- Make sure that all attachment mechanisms are securely locked into place and closed before each use of the CONCORD QUIX.
- Always use the safety harness when your child is sitting or lying in the CONCORD QUIX (see USING THE HARNESS SYSTEM).


_ COLLAPSING THE CONCORD QUIX

CAUTION!



- Never collapse the CONCORD QUIX with your child in it.

Remove all items from the baggage net (13) and the seat before collapsing the CONCORD QUIX.


Bring the backrest into its most upright position (see SETTING THE SEAT TILT ANGLE),

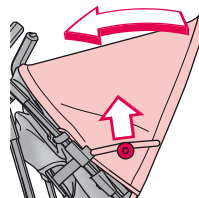


fold the front part of the sun visor inward, and tilt the entire sunroof back completely.

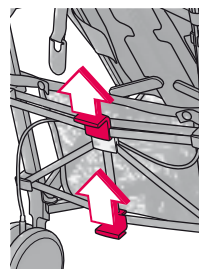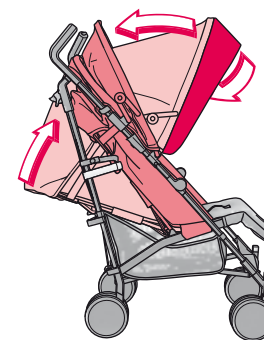


Move the upper and lower TWINLOCK control buttons (12) up simultaneously and bring together the two handlebars (01) of the CONCORD QUIX forward and downward.

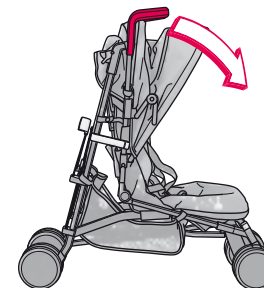

Collapse the CONCORD QUIX completely until you hear the transport lock (11) locking into place.

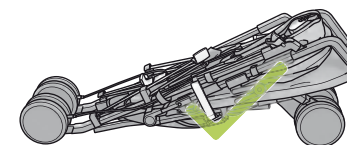


USING THE HARNESS SYSTEM

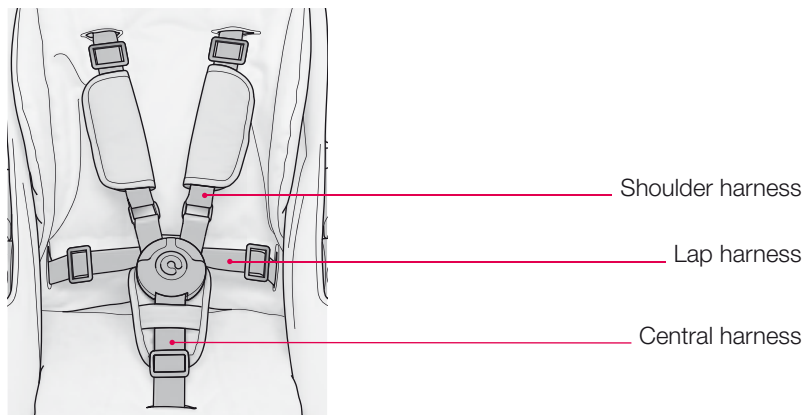


Open the harness lock and place the harnesses to the sides and downward. Place your child onto the seat as far back as possible.

Guide the central harness with the harness lock up between the legs of the child. Click the harness lock adapters of the shoulder and lap harnesses into their respective receptacles in the harness lock.

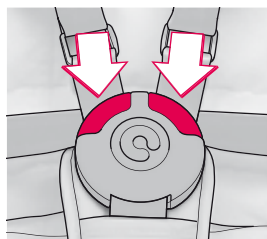


Simply press the central button on the harness lock to release the individual harness adapters.

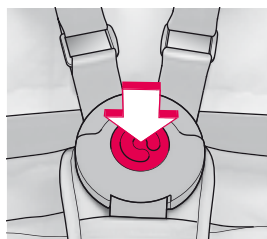

Make sure that your child is always securely harnessed when using the buggy.

Adjust the harness straps until they sit snug and tight on the child. Slide the belt adjusters up or down to adjust the length of the harness.


You will have to adjust the lengths of the shoulder straps periodically as your child grows. Thread the harnesses out of the openings in the backrest (03) and thread them back through the openings (03) matching your child's size. Always make sure to thread the right and left shoulder harness into an opening of the same height.

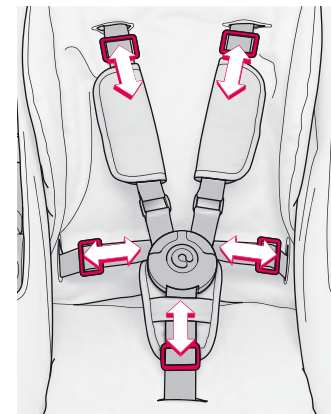

Make sure that the plastic anchors at the ends of the harnesses are threaded tightly through the openings (03) and that the harnesses are not twisted. Test for correct adjustment by tugging on the shoulder harnesses with moderate strength.

Ensure that none of the harness straps are twisted.

The child safety lock is located on the back of the harness lock. It can be activated and deactivated by simply turning it. The activated child safety lock blocks the opening mechanism of the harness lock.

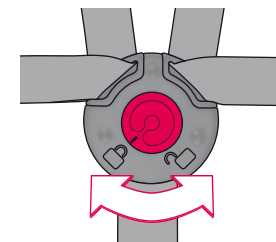


WARNING!


- Only use the shoulder and lap harness in combination with the central harness.

_ USING THE PARKING BRAKE

Push the control button (09) on the right of the handlebar (01) downward to activate the parking brake.

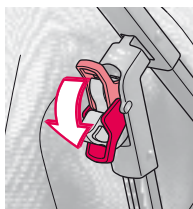


Press the release button and move the operating lever (09) on the right handle bar (01) upward to release the parking brake.

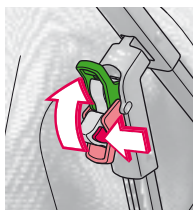

_ LOCKING THE FRONT WHEELS


Turn the front wheels until they face backwards and turn the control knob (08) a quarter turn until it clicks into place if you wish to lock the front wheels of the CONCORD QUIX for straight forward movement.

Turn the control knob (08) another quarter turn to release the front wheel lock.

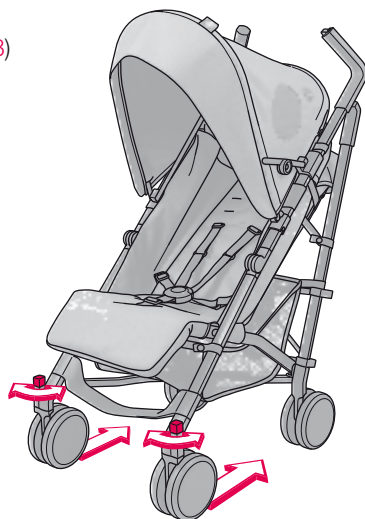


_ SETTING THE SEAT TILT ANGLE

The adjustment straps (10) on the back of the CONCORD QUIX allow you to steplessly adjust the tilt angle of the backrest.

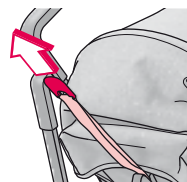

Pulling the upper adjustment strap will raise the backrest.

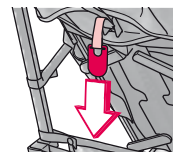


Pulling the lower adjustment strap will lower the backrest.



_ SETTING THE FOOTREST


The footrest (07) can be locked in its top-most position.

Press the two release levers (06) on the left and right on the bottom of the footrest to release it. Now adjust the footrest (07) downwards and let go of the release lever (06).


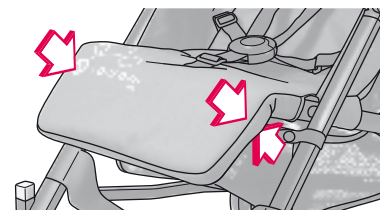


_ USING THE SUN VISOR

The sun visor is steplessly adjustable and can be locked in its front-most position.

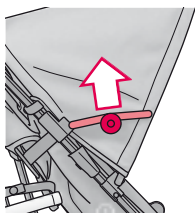

Push the arresters on both sides of the sun visor upward to release them.

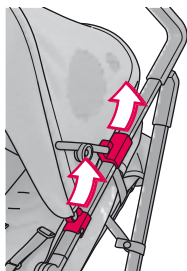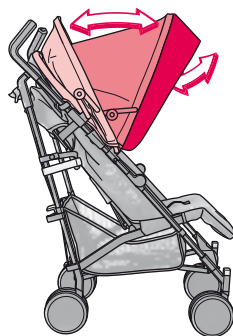


Open all connections to the cover of the CONCORD QUIX to remove the sun visor (02). Push the attachment clips of the sun visor (04) upward from their holders and then pull the visor forward and off.

To attach the sun visor, clip the attachments (04) of the sun visor (02) onto the tube frame of the CONCORD QUIX and move them down until they click into place. Now you can connect the sun visor with the rest of the cover of the CONCORD QUIX. Check that all attachments are closed.

_ USING THE RAIN COVER

The rain cover can be stored in the baggage net. Unfold the rain cover completely before use. Pull it over the CONCORD QUIX from the top down. Use the velcro straps to affix the rain cover on the tube structure of the CONCORD QUIX.

Leave the rain cover to dry out completely before refolding and storing!

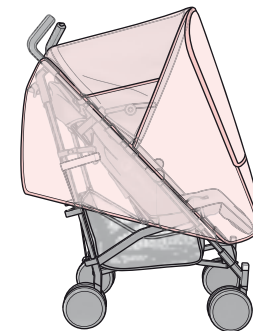

_ MAINTENANCE

Do not expose the cover to sunlight for long periods. Wash the plastic parts with warm water and soap and carefully dry all the components after.

Regularly check the brakes, harnesses and fastening elements that may suffer wear and tear through use.

The cover can be removed for washing. The individual elements of the CONCORD QUIX cover are interconnected and attached to the tube frame via snap fasteners and velcro straps. Open all fastenings before attempting to remove the cover. Pull the cover off the seat area first, and then from the backrest. When reattaching the cover, simply reverse the process. Thread the harnesses through the relevant openings of the cover. Make sure that all fasteners and connections are positioned correctly and are closed securely.

- The colour of the cover may run when wet or in the wash.
- Do not use solvents on the cover!



_ WARRANTY

The guarantee begins on the day of purchase. The guarantee period corresponds to the statutory warranty period in the end-user's country concerned. At the manufacturer's discretion, the guarantee shall cover rectification, replacement or a price reduction.

The guarantee is valid for the original purchaser only. In the event of any defect, claims can not be considered unless the specialist dealer is notified of the fault as soon as it occurs for the first time. If the specialist dealer is unable to remedy the problem himself, he must return the product to the manufacturers together with details of the complaint, official proof of purchase and the purchase date. The manufacturers assume no liability for faulty goods that they did not supply.

The guarantee does not apply where:

- the product has been modified;
- the product is not brought back to the specialist dealer complete with proof of purchase within 14 days of the defect occurring;
- the defect was caused by improper usage or maintenance or due to anything else deemed to be the fault of the user, in particular failure to comply with the instructions for use;
- repairs have been carried out on the product by third parties;
- the defect was caused as the result of an accident.
- the serial number has been damaged or removed

The guarantee makes no provision for any alteration or deterioration to the product that is incurred through normal usage (wear and tear). The period of guarantee shall not be extended by any remedial measures carried out by the manufacturers in the event of a claim.

_ **DEUTSCH**
_ **ENGLISH**
_ **FRANÇAIS**
_ **ESPAÑOL**
_ **ITALIANO**
_ **PORTUGUÊS**
_ **NEDERLANDS**
_ **NORSK**
_ **DANSK**
_ **SUOMI**

Einbau- und Bedienungsanleitung
Instructions for attachment and use
Directives d'installation et mode d'emploi
Instrucciones de montaje y de uso
Istruzioni per l'uso e il montaggio
Manual de montagem e de utilização
Inbouw- en bedieningshandleiding
Bruksanvisning og monteringsveiledning
Monterings- og betjeningsvejledning
Kiinnitys- ja käyttöohjeet

Concord GmbH
Industriestraße 25
95346 Stadtsteinach
Germany

Phone +49 (0)9225.9550-0
Fax +49 (0)9225.9550-55
info@concord.de

www.concord.de



QX 03/112